
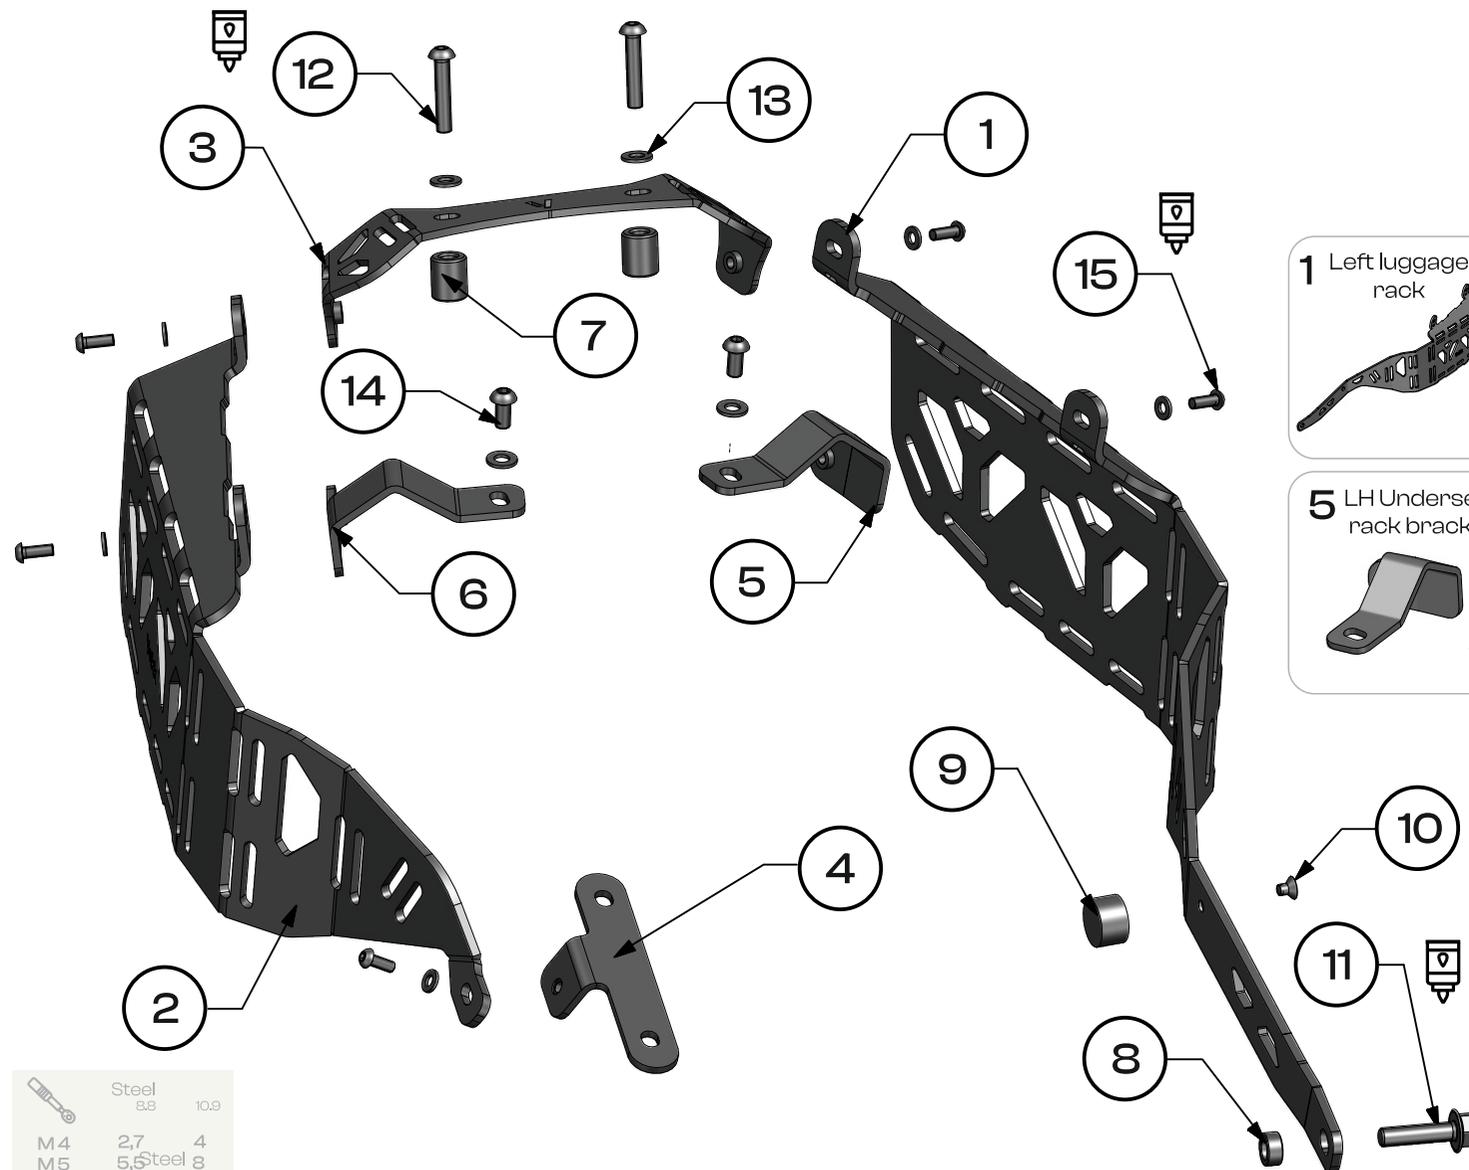
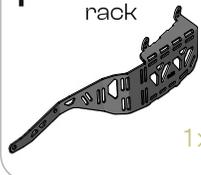
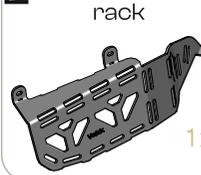


Kove 800X Rally

ID:3077334

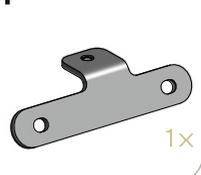

- | | | | |
|---|---|---|--|
| 1 Left luggage rack

1x | 2 Right luggage rack

1x | 3 Central bracket


1x | 4 Bracket adapter

1x |
| 5 LH Underseat rack bracket

1x | 6 RH Underseat rack bracket

1x | 7 Spacer sleeve

D18.5 x d9 x H22
2x | 8 Spacer sleeve

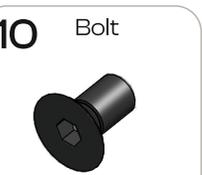D17 x d11x H8
1x |
| 9 Vibro mount

1x | 10 Bolt

M6x8-DIN 7991
1x | 11 Bolt

M10x40-DIN6921
1x | |
| 12 Bolt

M8x40-DIN 7380
2x | 13 Washer

M8-DIN 125
4x | 14 Bolt

M8x16-DIN 7380
2x | |
| 15 Bolt

M6x16-DIN 7380
5x | 16 Washer

M6-DIN 125
5x | | |

	Steel 8.8	10.9
M4	2,7	4
M5	5,5	Steel 8
M6	9,7	13,7
M8	23	33
M10	47	66
M12	80	116
M14	130	184
M16	196	287
M18	270	395
M20	385	560

Read before installation.

All bolts have to be finally tighten after installation all parts on vehicle.



Fig. 1

 one person
  use a medium-strength
  tighten with torque
 OEM Original Equipment Manufacturer



**!!! Initially, attach the screws loosely.
After assembling everything together, tighten them with the appropriate force.**

Loosen the silencer mounting from the bracket, and remove the bracket from the frame. **[Fig.3]** Attach **[4]** bracket adapter to the frame using the **OEM** bolts through the bracket. Apply medium-strength thread locker. **[Fig.3]**. Remove the seat. **[Fig.2]**.

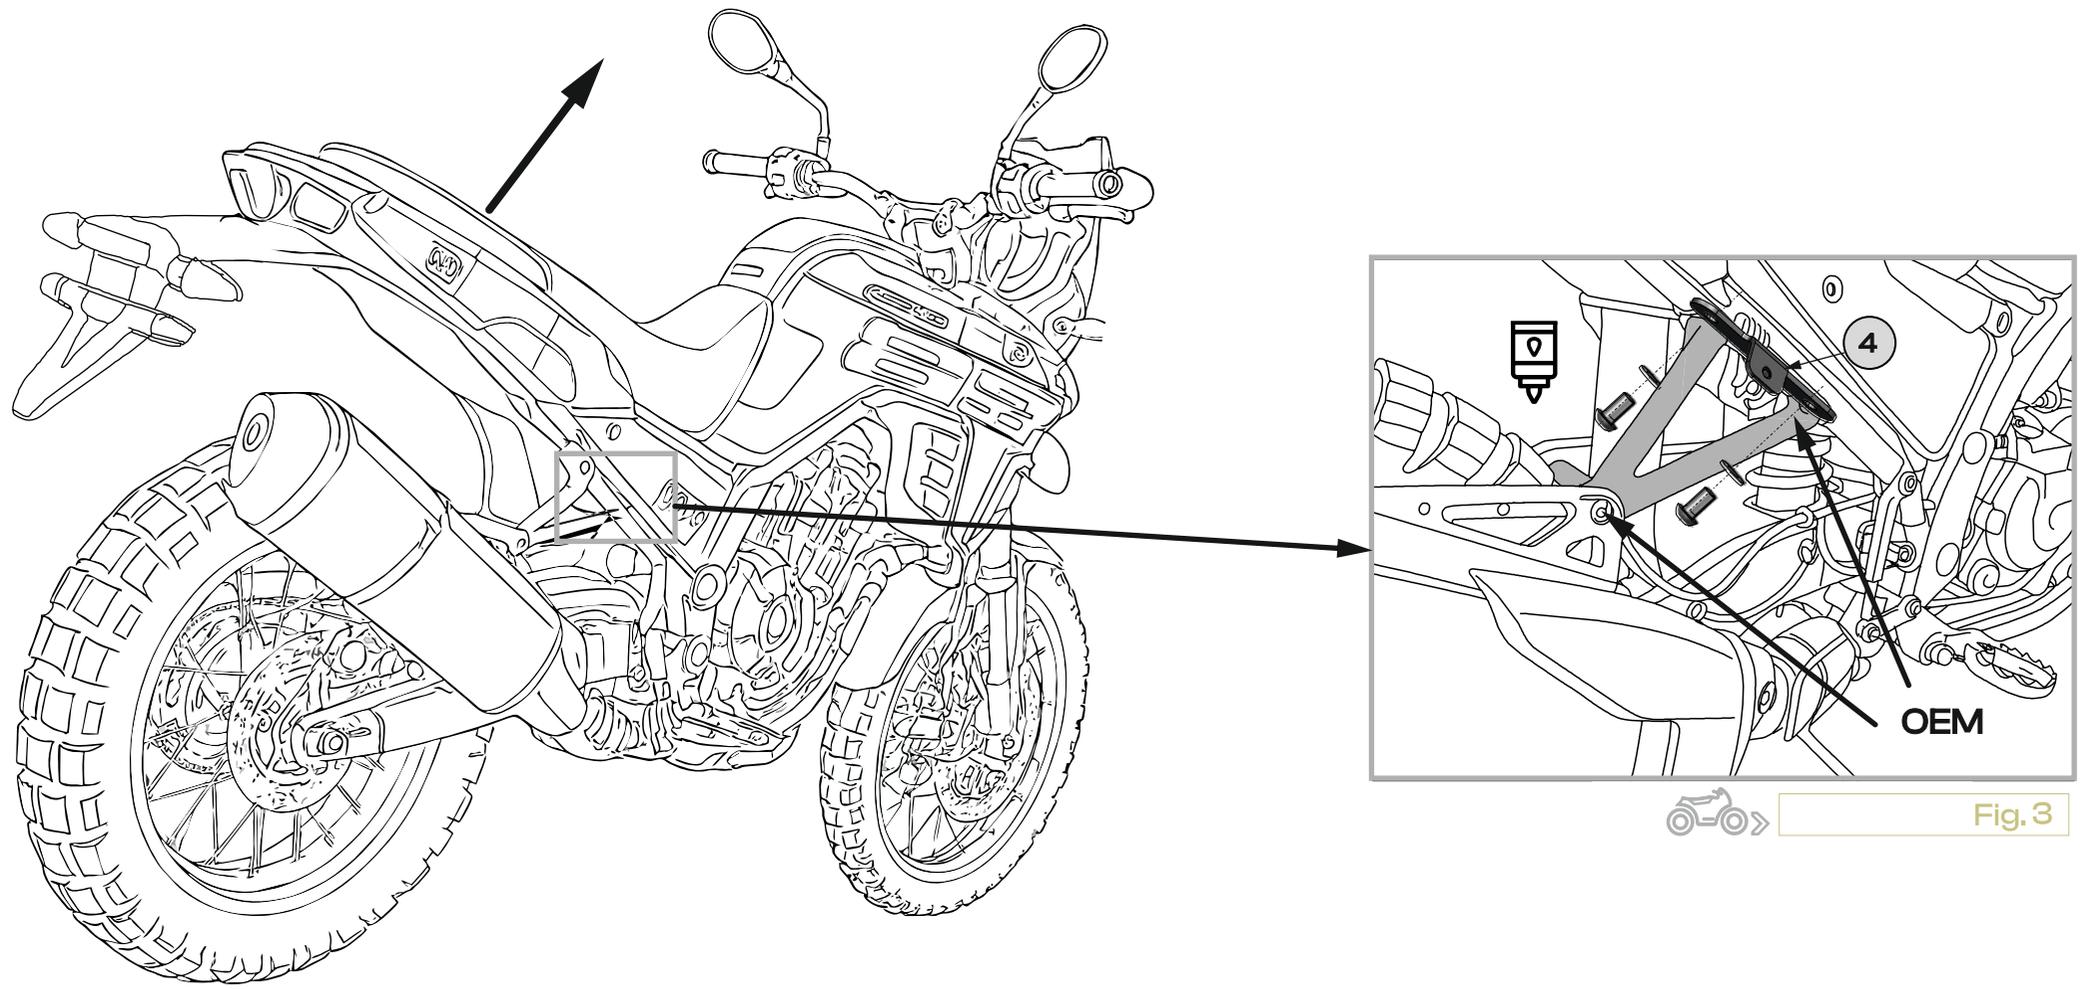


 Fig.2

 Fig. 3



!!! Initially, attach the screws loosely.

After assembling everything together, tighten them with the appropriate force.

Fasten **[3]** Central bracket using **[12]** Bolts (M8x40-DIN 7380), through **[13]** Washers (M8-DIN 125) and **[7]** Spacer sleeves (D18.5xØ9xH22). **[Fig. 4]**. Install and tighten **[5]** LH underseat rack bracket and **[6]** RH underseat rack bracket using **[14]** Bolt (M8x16-DIN 7380) and **[13]** Washer (M8-DIN 125). **[Fig. 4]**, **[Fig. 5]**.

Lightly fasten **[2]** Right luggage rack to **[4]** Bracket adapter, **[6]** RH underseat rack bracket, and **[3]** Central bracket using **[15]** Bolts (M6x16-DIN 7380) through **[16]** Washers (M6-DIN 125). **[Fig. 4]**, **[Fig. 5]**. Fasten **[9]** Vibro mount to **[1]** Left luggage rack using **[10]** Bolt (M6x8-DIN 7991). **[Fig. 7]**.

Fasten **[1]** Left luggage rack to **[3]** Central bracket and **[5]** LH underseat rack bracket using **[15]** Bolts (M6x16-DIN 7380) through **[16]** Washers (M6-DIN 125), and to the motorcycle frame using **[11]** Bolt (M10x40-DIN 6921) through **[8]** Spacer sleeve (D17xØxH18). Apply medium-strength threadlocker. **[Fig. 4]**, **[Fig. 6]**, **[Fig. 7]**.

Align all components evenly along the motorcycle's center axis and tighten all bolts to the specified torque.

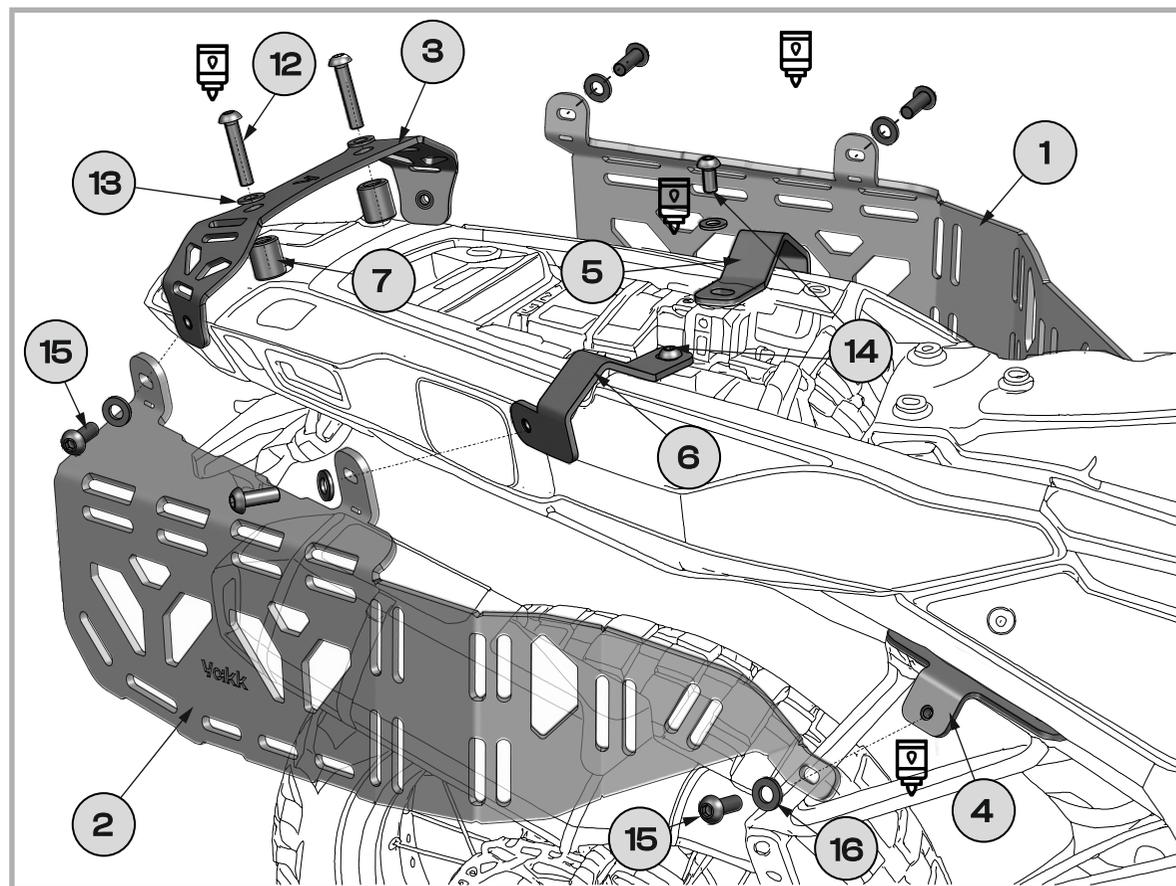


Fig. 4

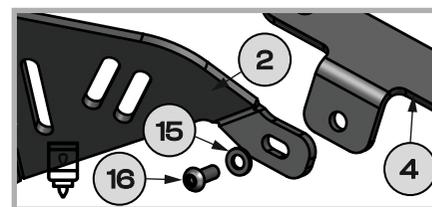


Fig. 5

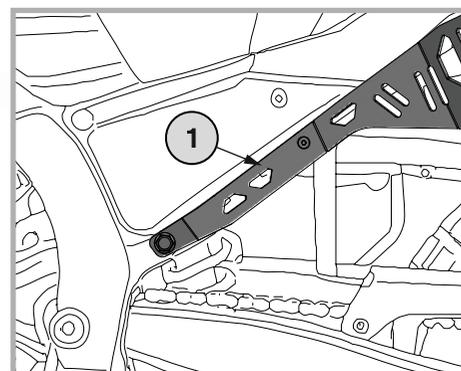


Fig. 6


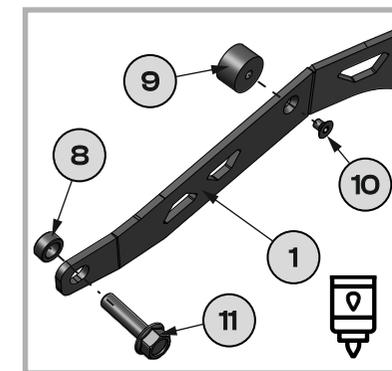


Fig. 7



Kove 800X Rally

ID:3077334 / ID:3077335 / ID:2951911

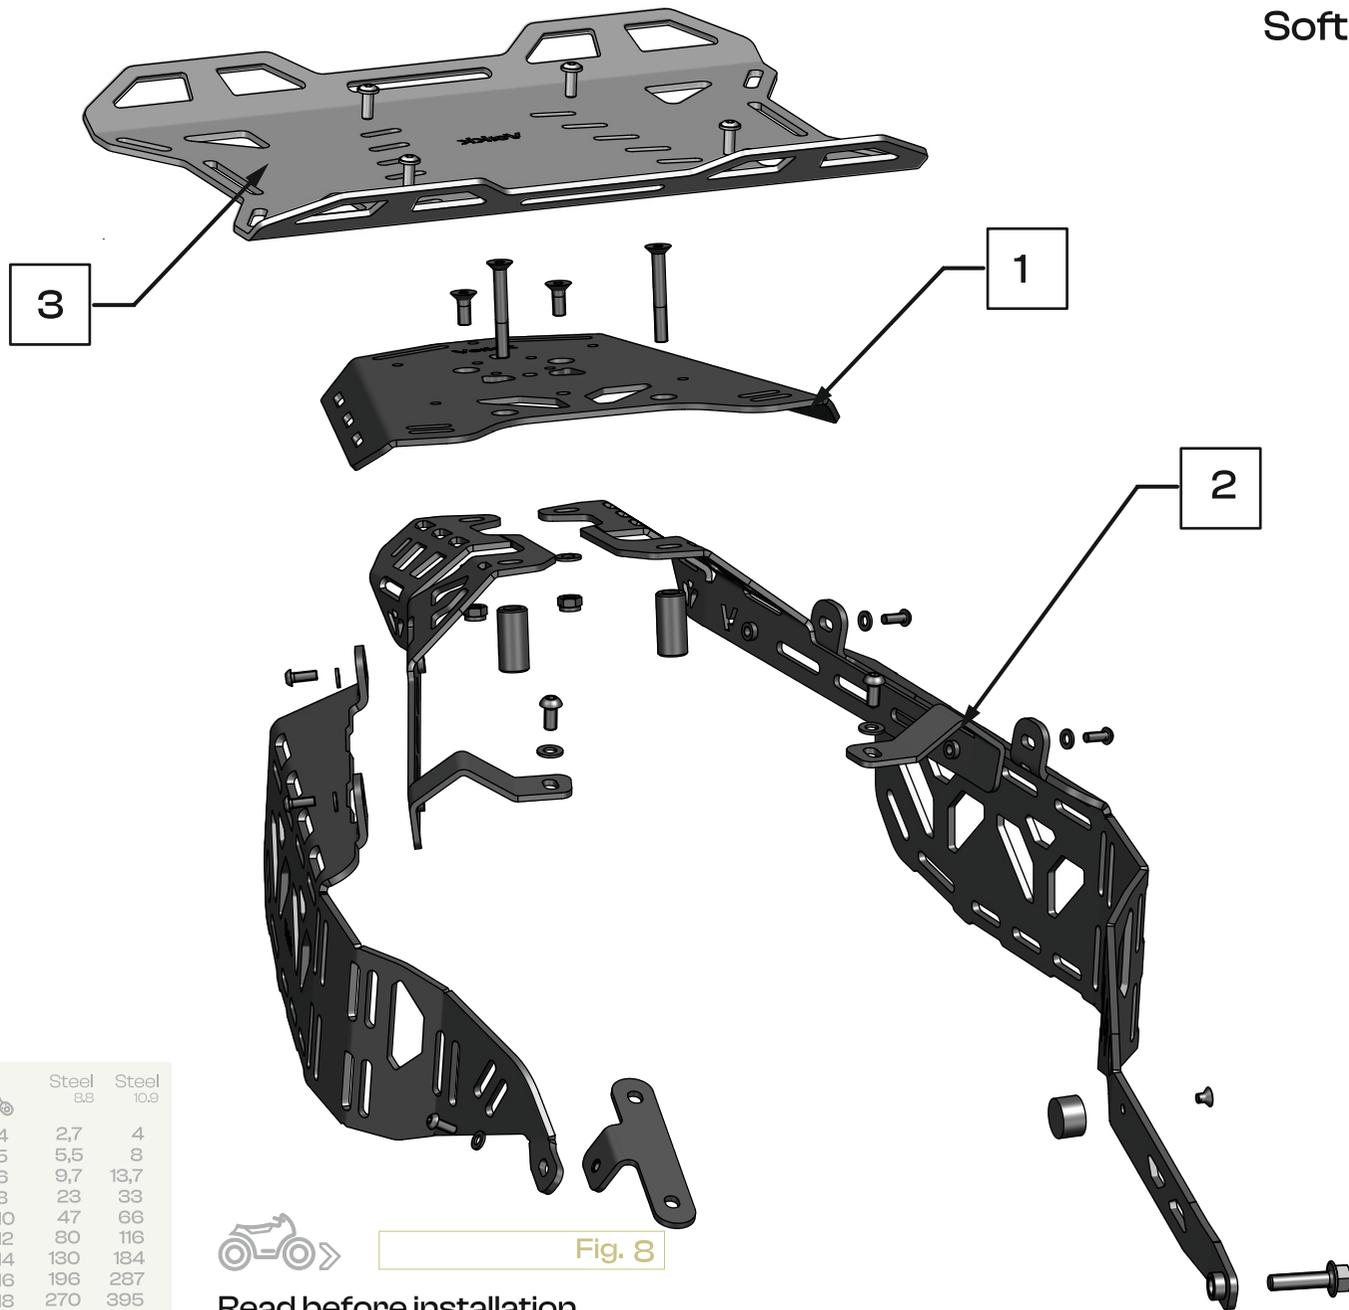

1 Yaak exp ID: 3077335

Parts used from product

2 Yaak exp ID: 3077334

Parts used from product

3 Yaak exp ID: 2951911

	Steel 8.3	Steel 10.9
M4	2,7	4
M5	5,5	8
M6	9,7	13,7
M8	23	33
M10	47	66
M12	80	116
M14	130	184
M16	196	287
M18	270	395
M20	385	560



Fig. 8

Read before installation.

one person
 use a medium-strength
 tighten with torque
 OEM Original Equipment Manufacturer

